

IMPORTANT SAFEGUARDS



FOR EXTRUSION SHREDDER

In addition to the GENERAL SAFEGUARDS in the front of this book, the following SAFEGUARDS should be followed:

1. Read all instructions.
2. Avoid contacting moving parts. Never feed food by hand. Always use completely assembled slicer with food feeder and food pusher.
3. Blade is sharp. Handle carefully when cleaning.
4. Moving Parts – keep Fingers out of Discharge Opening.

SAVE THESE INSTRUCTIONS

EXTRUSION SHREDDER

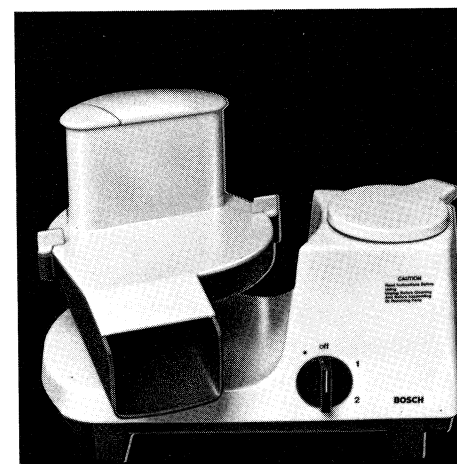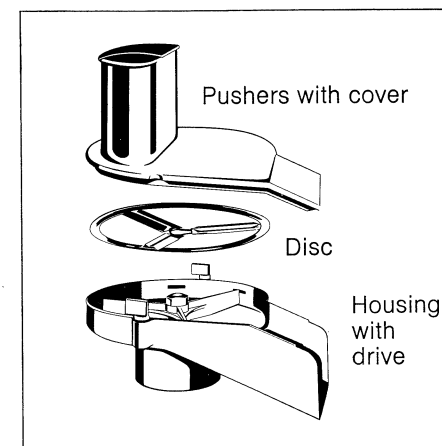

The extrusion shredder slices larger quantities of vegetables or fruit and is an ideal accessory for the Bosch kitchen machine.

Assembly of the extrusion shredder

Twist aside the clamps on the right and left side of the shredder and remove the lid.

Insert the required shredding or slicing disc on to the shaft and close the lid.

There are 2 shredding discs and 1 double sided slicing disc, which give 4 different possibilities for use.

How to use the extrusion shredder

The extrusion shredder is placed on the lower drive coupling of the drive unit and with slight pressure turned counterclockwise on to the base until it engages.

Cleaning

Follow the same procedure as with the slicer and shredder attachment. Please dry the attachment at temperature below 200° F.