

The Bowl Scraper includes the scraper blade driver and two sets of scraper blades; one set is a spare. **SCRAPER BLADES:**

- There are two different sizes of scraper blades.
- The smaller blade attaches to the short arm of the driver and scrapes the center column.
- The larger blade attaches to the longer arm of the driver and scrapes the outer wall.
- The shaft of the longer blade is slightly larger in diameter than that of the shorter blade.
- The scraper blades will snap in to let you know they are secure.

USING THE BOWL SCRAPER:

- If you have a new plastic bowl, the plastic of the scrapers will stick to the bowl. Use whatever oil is in your recipe (butter, shortening, vegetable oil, etc.) to lubricate the bowl. It only takes a little bit on both the center column and the outside of the bowl. You can also use the slightest amount of cooking spray like Vegalene®. This is usually not necessary with a used bowl, but will be necessary until the inside of a newer bowl is no longer shiny. NOTE: If using a Stainless Steel Bowl, it must always be lubricated well.
- The scraper should only be used when adding ingredients, never in an empty bowl.
- To attach the bowl scraper simply snap the scraper blade driver over the metal or plastic whip driver. You must make sure that BOTH clips are fully latched.
- To remove the bowl scraper, simply release the two (2) clips and pull it free. The smaller inside blade will come off of the driver and you can remove it separately.
- The bowl scraper may be used with the BOSCH plastic or stainless steel bowl with center column.


CLEANING:

 It is recommended that you wash all parts before their first use to remove any particles left over from manufacturing. All parts are top rack dishwasher safe, but we recommend that you hand wash them to avoid any softening of the plastics in high-heat dishwashers.
Replacement blades are available from your local L'EQUIP Retailer.

Stock # 360100

180 West 500 North • North Salt Lake, UT 84054

www.lequip.com

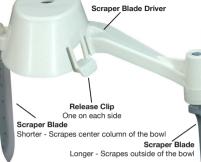

Lubricate Center Column

Lubricate Outside Wall

