

IMPORTANT SAFEGUARDS



FOR BLENDER

In addition to the GENERAL SAFEGUARDS in the front of this book, the following SAFEGUARDS should be followed:

1. Read all instructions.
2. Keep hands and utensils out of container while blending to prevent the possibility of severe personal injury or damage to the blender. A scraper may be used but must be used only when the blender is not running.
3. Blades are sharp. Handle carefully.
4. To avoid injury, never place cutter assembly cutting blades on base without jar properly attached.
5. Always operate blender with cover in place.
6. The use of attachments, including canning jars, not recommended by the manufacturer may cause hazards.
7. When blending hot liquids, remove center piece of 2-piece cover.

SAVE THESE INSTRUCTIONS

BLENDER

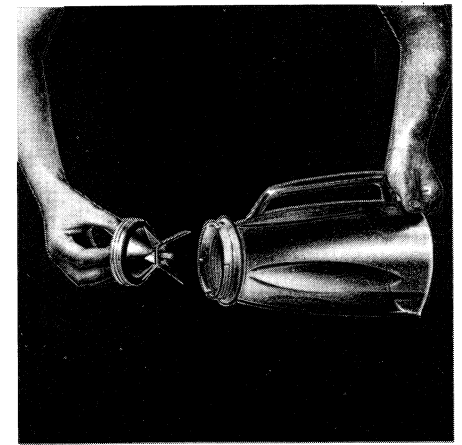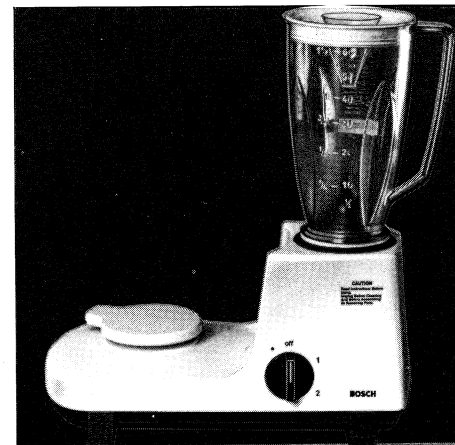


Remove the protective drive cover from the blender drive and place the blender on it, turning counterclockwise to lock. Place the drive cover on the mixing bowl drive.

Note the arrow direction and the inscription "off-on" on the container. To unscrew the blender base from the container, use the protective cover of the blender drive. It fits into the two wings of the base like a wrench. Unscrew the base from the blender container in counterclockwise direction.

The blender holds 1½ quarts but should not be filled more than ¾ full (2⅝ pints

or 52 fluid ozs.) to prevent splashing. (Cover blender with lid!). Because of uniform reducing to small pieces, it is suggested that no more than 4¼ ozs. (125 g) of dried food, e. g., nuts, should be filled in at one time. For most jobs, the blender requires only a few seconds, but at the most 1 to 2 minutes: Do not let it run unnecessarily long.

If the blades are blocked by the contents and not running properly, switch off immediately and loosen up the contents. Use a wooden or plastic spatula.

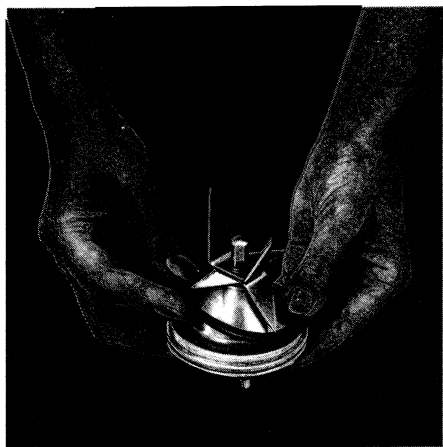

Cleaning

Fill the blender $\frac{1}{3}$ full with warm water, set on cover and switch on again for a short time. Add a detergent to the water to remove fatty food residues.

If it is still necessary, unscrew base completely and wash it in running water.

Do not put it into a dishwasher.

After washing, be sure that the rubber ring lies evenly on the blender base when screwing back on.

Blender-Bowl only is dishwasher proof.